



CPE ROUTER NULL MODEM CABLE LAYOUT

The CPE Unit provides a Rescue console menu through the serial port (RS-232) interface. This interface can be use to reset the parameters entered previously to the factory default values. It is important to follow the right serial cable layout to obtain the rescue console menu options:

Cable Layout:

RS-232 Null modem cable pin outs:

| | | | | | | | | | |
|----------|---|---|---|-----|---|---|---|---|---|
| HEAD #1: | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| HEAD #2: | 4 | 3 | 2 | 1,6 | 5 | 4 | 8 | 7 | - |

Connector Head:



Null Modem Cable:

