

TAG-800 Quick Setup Guide



Package Contents

- TAG-800 CPU (1)
- 5 Volt Power Adapter (1)

Basic Introduction

Operation Mode: Bridge Mode

WAN Interface: LAN1

LAN Interface: LAN2, LAN3, LAN4



Quick Installation

Always double check the contents of the package to see if anything is missing or damaged.

1. Un-package the TAG-800 and set it on a flat open area.
2. Set your computer's IP property to: IP address: 192.168.10.100 and Subnet Mask: 255.255.255.0
Use a Crossover Ethernet cable to connect the LAN1 port to your computer's Ethernet port
3. Connect the power plug to TAG-800.

Web Control Interface

The factory default IP address for the TAG-800 is: **192.168.10.139**

(Default IP: LAN1: 192.168.10.139, LAN2: 192.168.1.1)

Open web browser and type the following into the address field:



Once the login prompt appears please use the following factory default settings to login:

Default Login: admin

Default Password: admin